



**INSTRUCTIONS BOOKLET
FOR DRAINAGE PUMP**

1. INSTRUCTIONS FOR DRAINAGE PUMP	4
2. ELECTRICAL DIAGRAM MB/235LI – MB/920E	5
3. ELECTRICAL DIAGRAM MS/451	7
4. ELECTRICAL DIAGRAM MS/900E	9


1. INSTRUCTIONS FOR DRAINAGE PUMP

- The waste pump is operating automatically during the rinse phase.


TANK TOTAL DRAINING

1. Switch the machine off (0-I button)
2. Take the overflow pipe off
3. Push the button START

N.B.: If this time is not sufficient , repeat the operation from point 3.

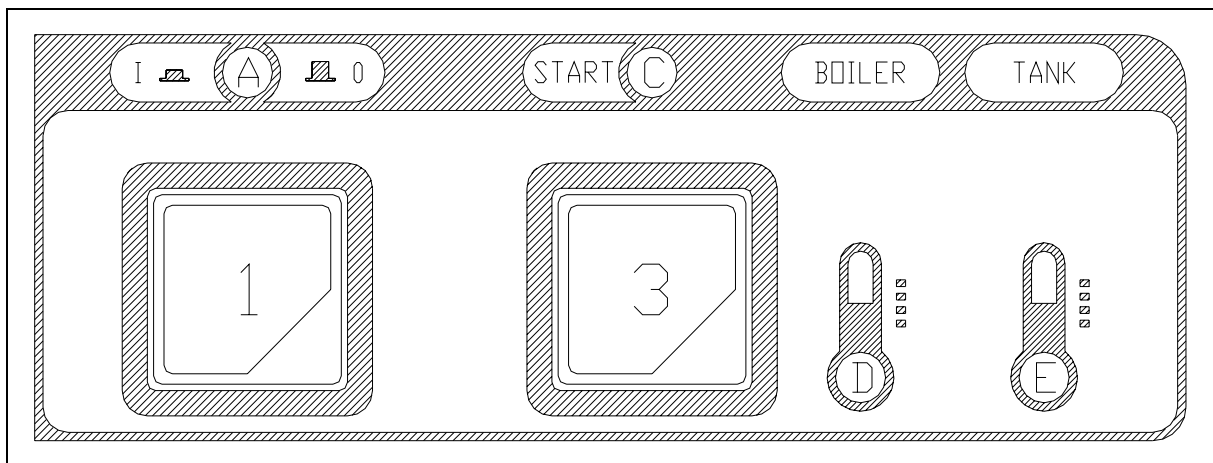


2. ELECTRICAL DIAGRAM MB/235LI – MB/920E

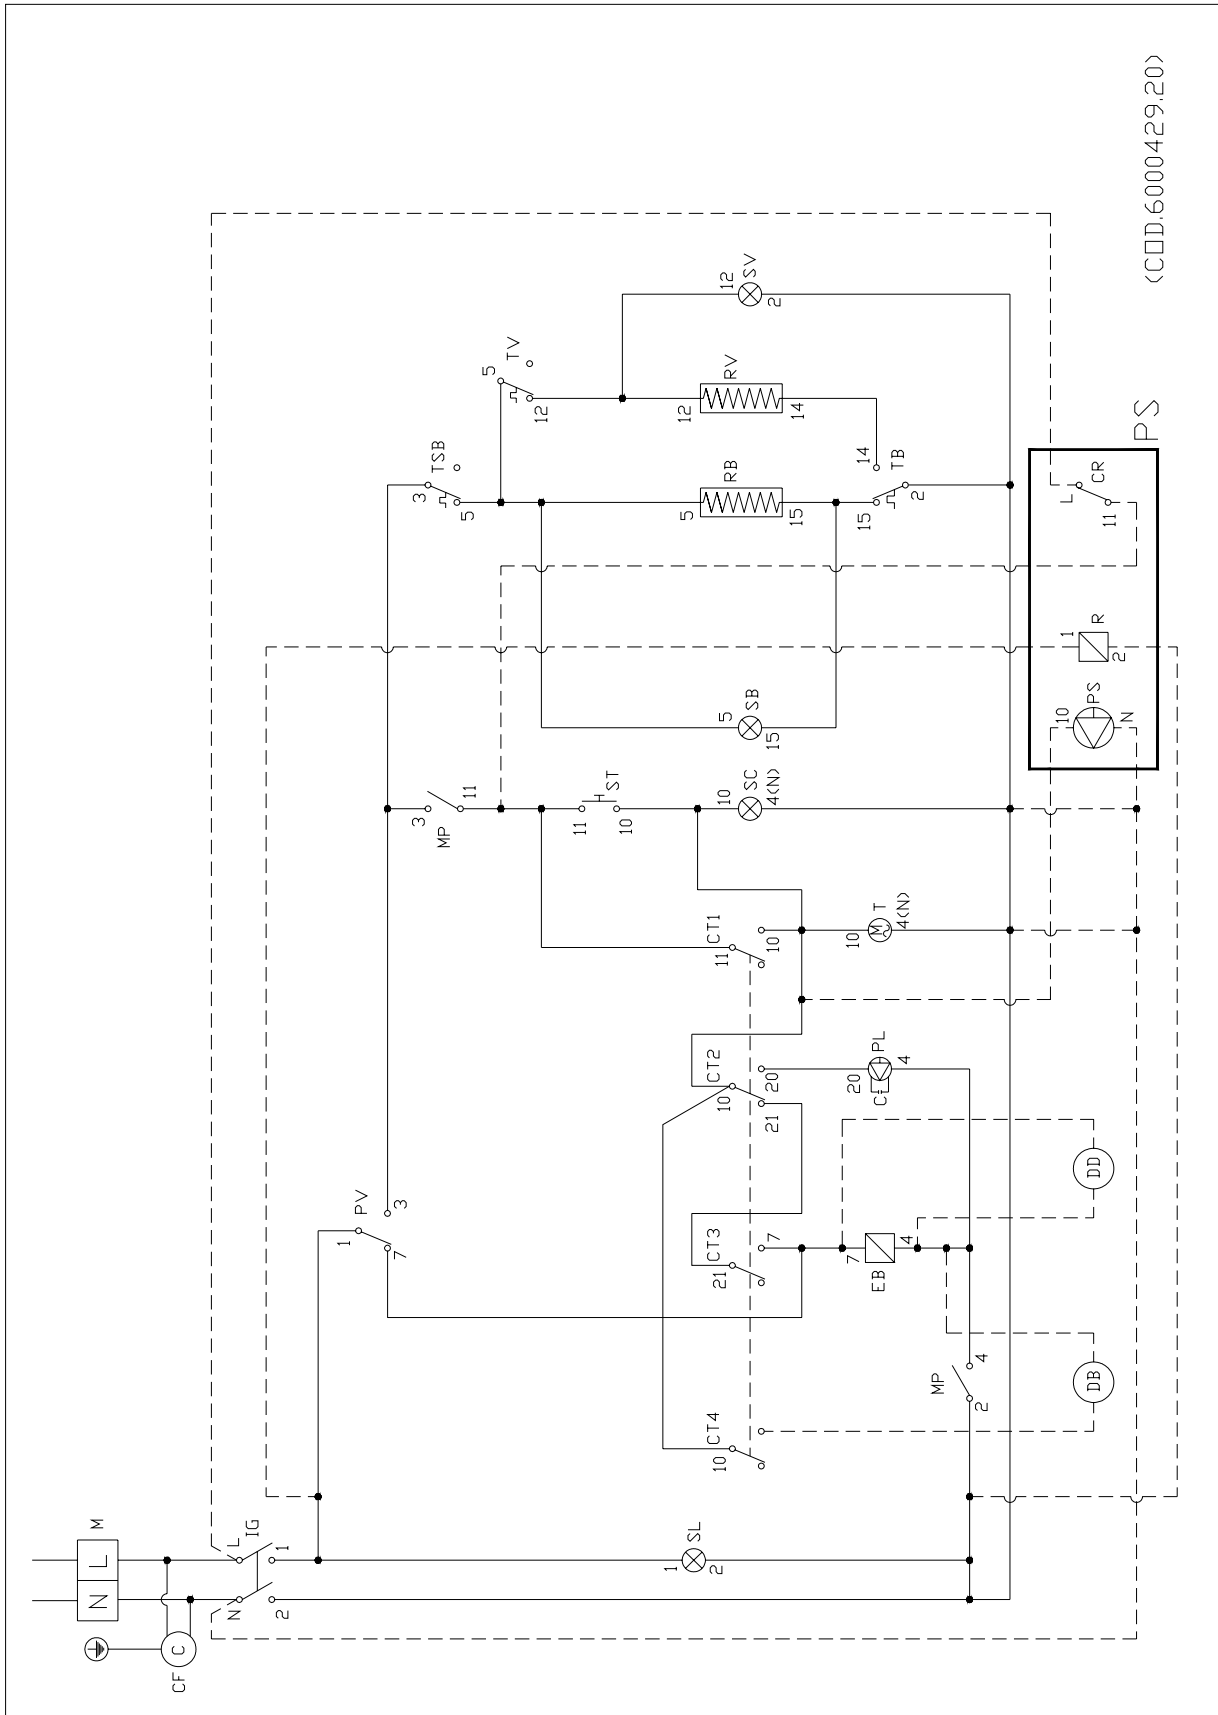

Rif.	Description
C	Condenser
CF	Suppression filter
CR	Relays contactor (Optional)
CT1	Timer contact
CT2	Timer contact
CT3	Timer contact
CT4	Timer contact
DB	Electric additive distributor
DD	Electric detergent distributor
EB	Boiler solenoid valve
IG	Main switch
M	Terminal board
MP	Door microswitch
PL	Washing pump
PS	Drainage pump (Optional)
PV	Tank pressureswitch
R	Relays (Optional)
RB	Boiler heating element
RV	Tank heating element
SB	Boiler pilot lamp
SC	Start pilot lamp
SL	Power pilot lamp
ST	Start
SV	Tank pilot lamp
T	Timer
TB	Boiler thermostat
TSB	Boiler safety Thermostat
TV	Tank thermostat


3. ELECTRICAL DIAGRAM MS/451

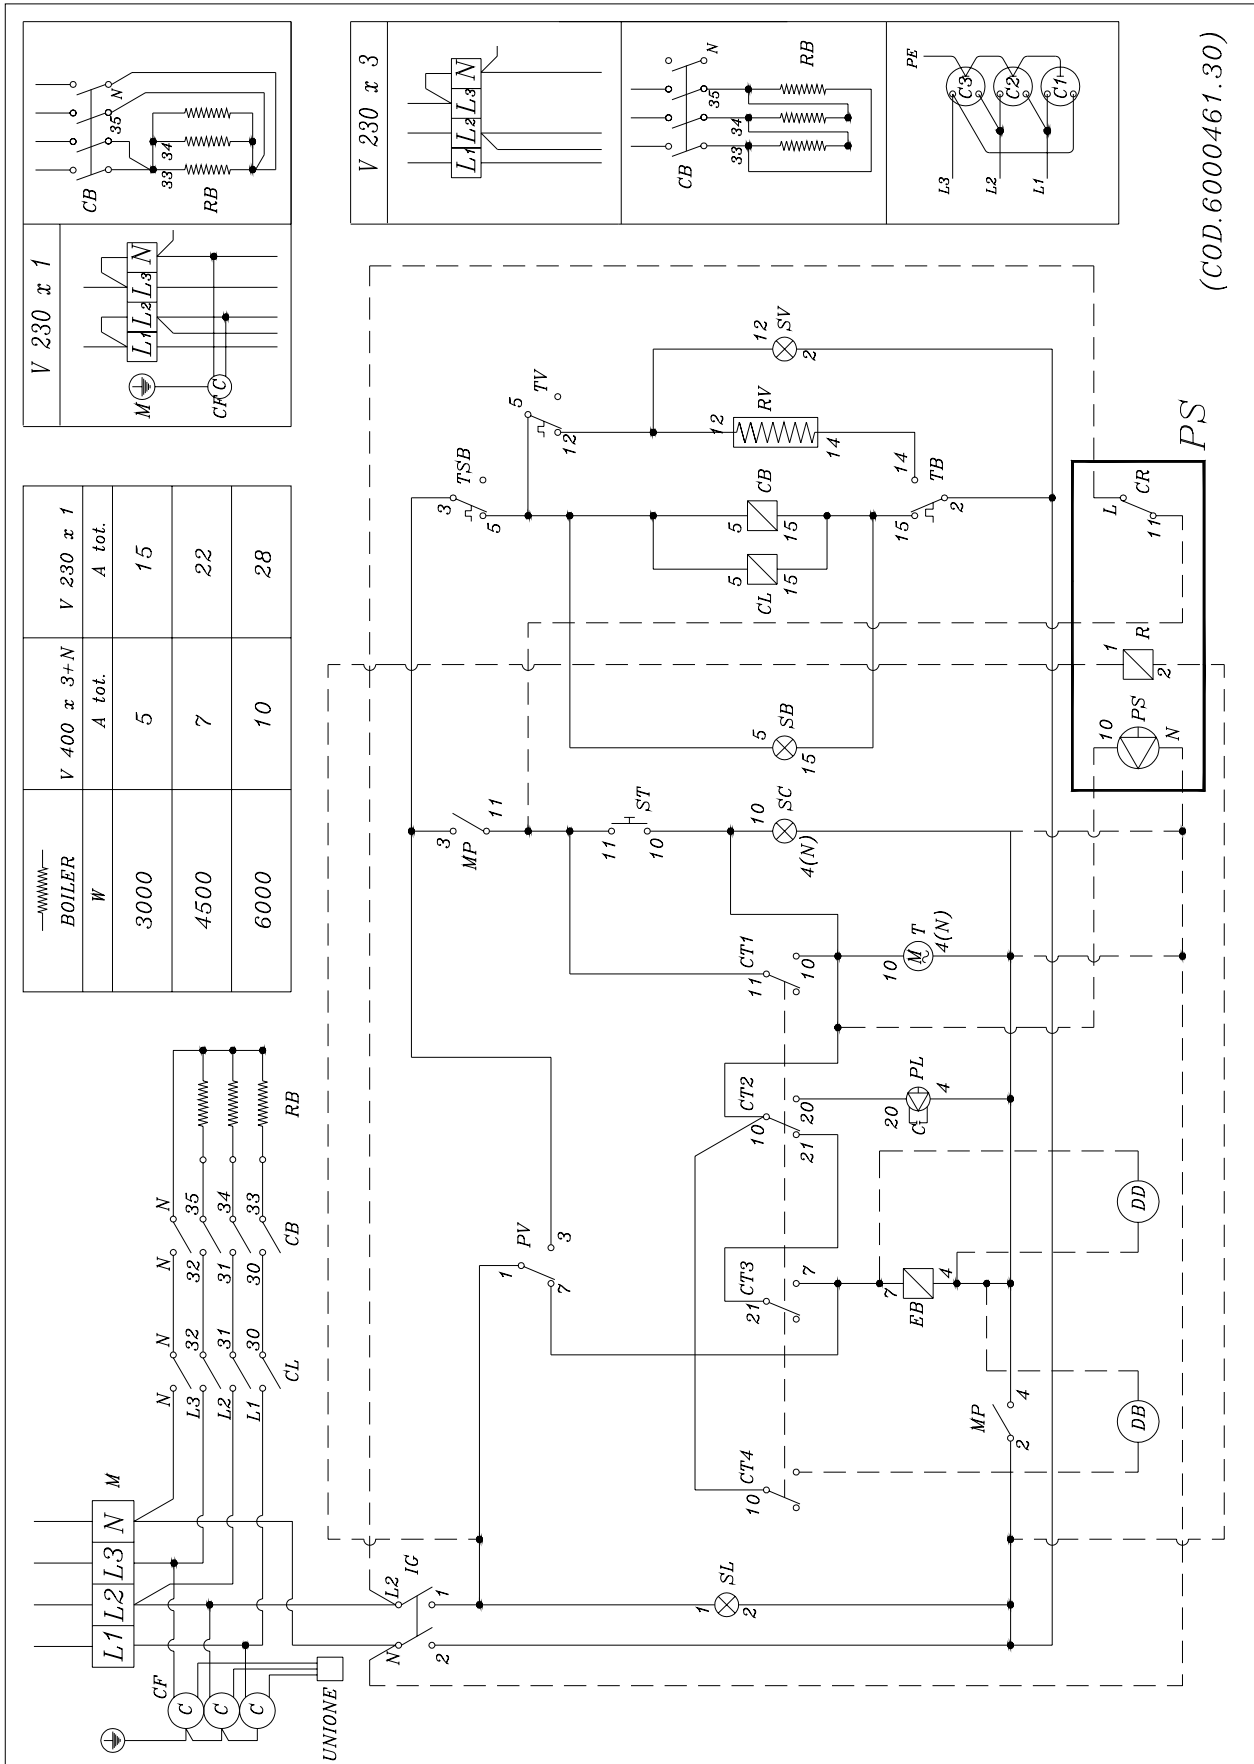

(COD. 6000461.30)


Rif.	Description
C	Condenser
CB	Boiler contactor
CL	Power supply contactor
CF	Suppression filter
CR	Relays contactor (Optional)
CT1	Timer contact
CT2	Timer contact
CT3	Timer contact
CT4	Timer contact
DB	Electric additive distributor
DD	Electric detergent distributor
EB	Boiler solenoid valve
IG	Main switch
M	Terminal board
MP	Door microswitch
PL	Washing pump
PS	Drainage pump (Optional)
PV	Tank pressureswitch
R	Relays (Optional)
RB	Boiler heating element
RV	Tank heating element
SB	Boiler pilot lamp
SC	Start pilot lamp
SL	Power pilot lamp
ST	Start
SV	Tank pilot lamp
T	Timer
TB	Boiler thermostat
TSB	Boiler safety Thermostat
TV	Tank thermostat

4. ELECTRICAL DIAGRAM MS/900E

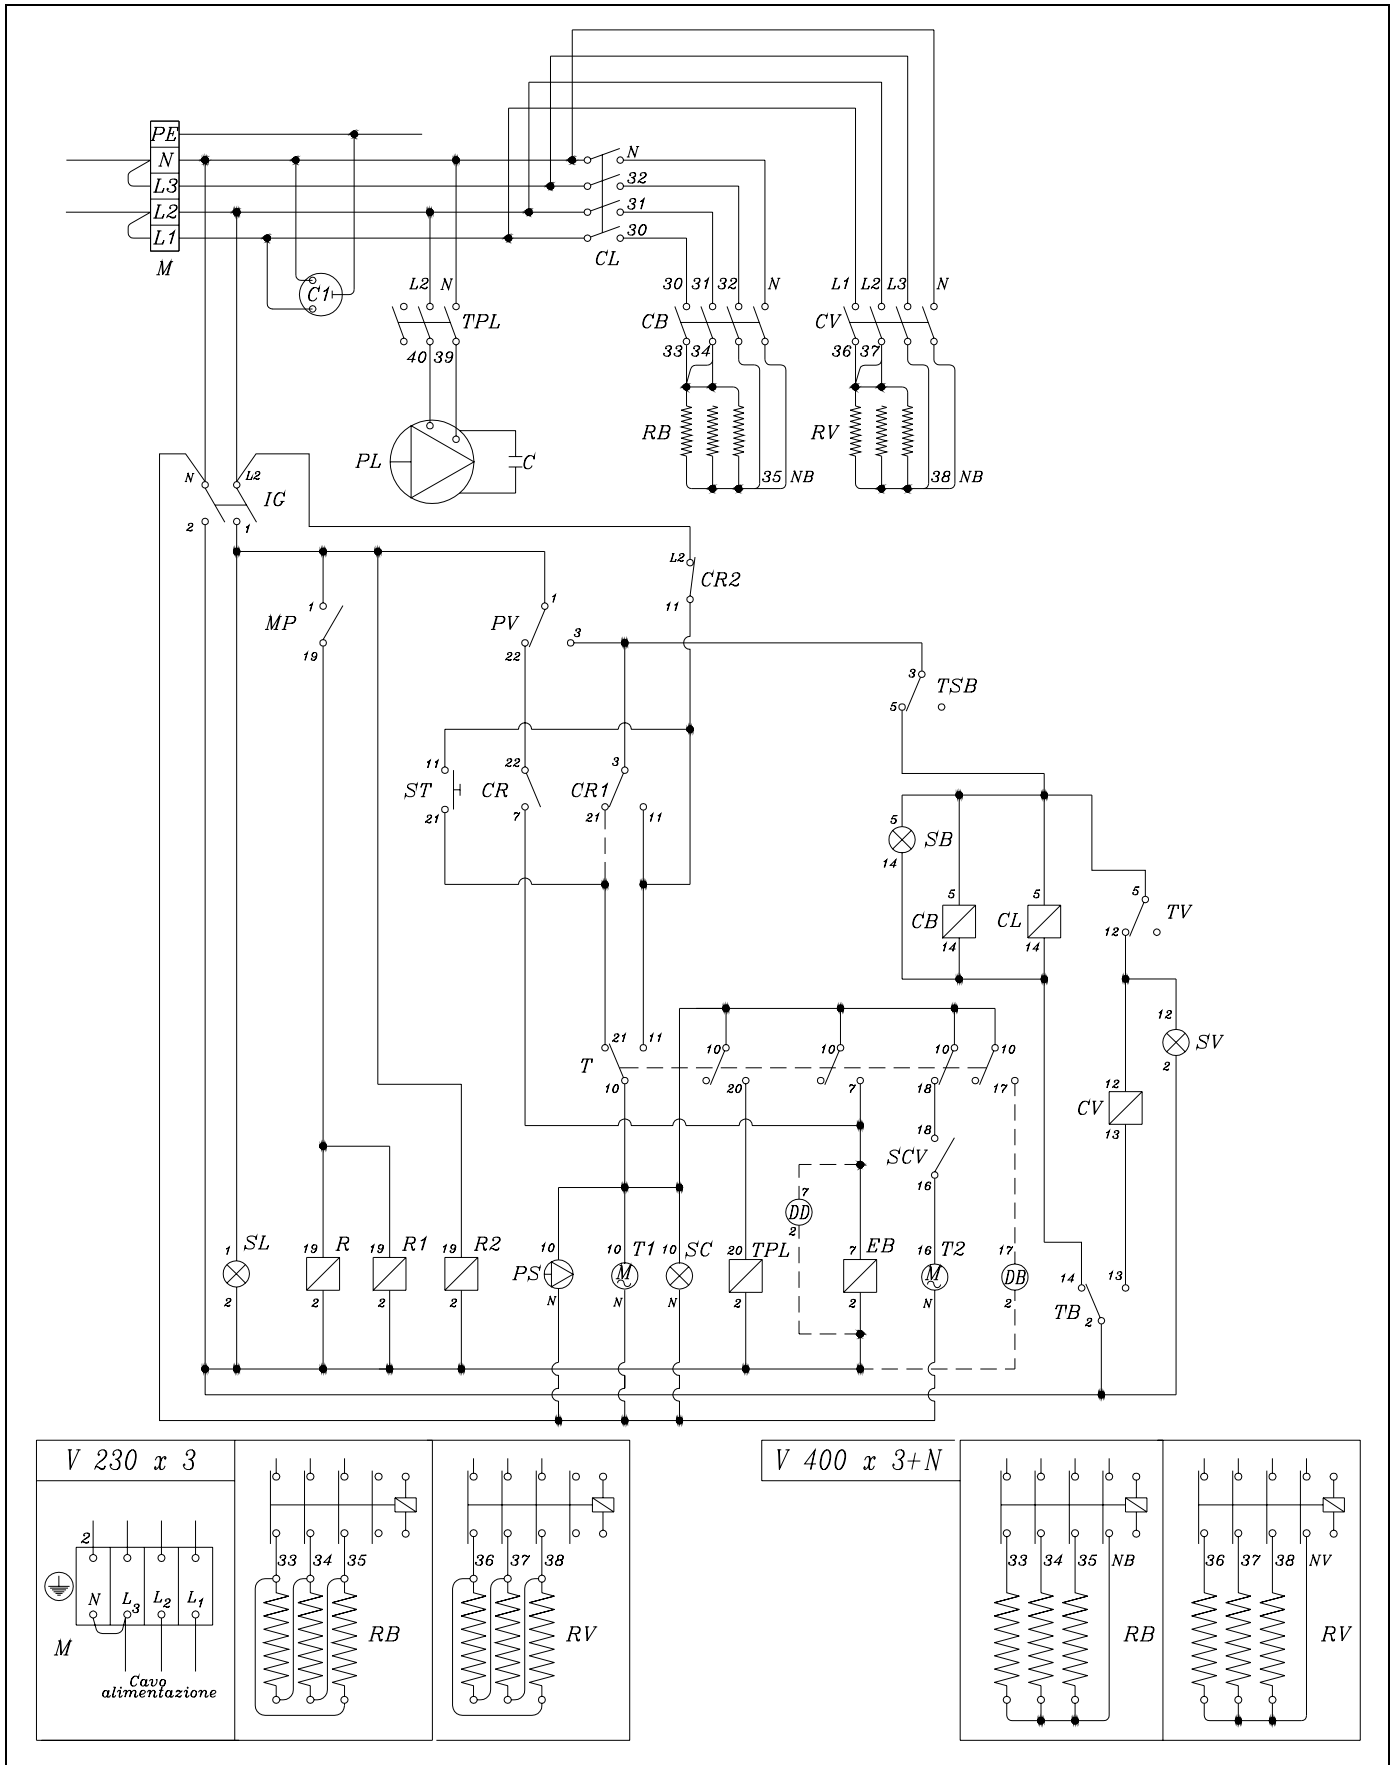


Rif.	Description	Rif.	Description
C	Condenser	RB	Boiler heating element
C1	Suppression filter	RV	Tank heating element
CB	Boiler contactor	SB	Boiler pilot lamp
CL	Power supply contactor	SC	Start pilot lamp
CR	Relays contactor	SCV	Cycle selector
CR1	Relays contactor	SL	Power pilot lamp
CR2	Relays contactor	ST	Start
CV	Tank contactor	SV	Tank pilot lamp
DB	Electric additive distributor (optional)	T	Timer
DD	Electric detergent distributor (optional)	T1	Timer ciclo1
EB	Boiler solenoid valve	T2	Timer ciclo2
IG	Main switch	TB	Boiler thermostat
M	Terminal board	TPL	Washing pump contactor
MP	Door microswitch	TSB	Boiler safety Thermostat
PL	Washing pump		
PS	Drainage pump		
PV	Tank pressureswitch		
R	Relays		
R1	Relays		
R2	Relays		


MB 235 LI

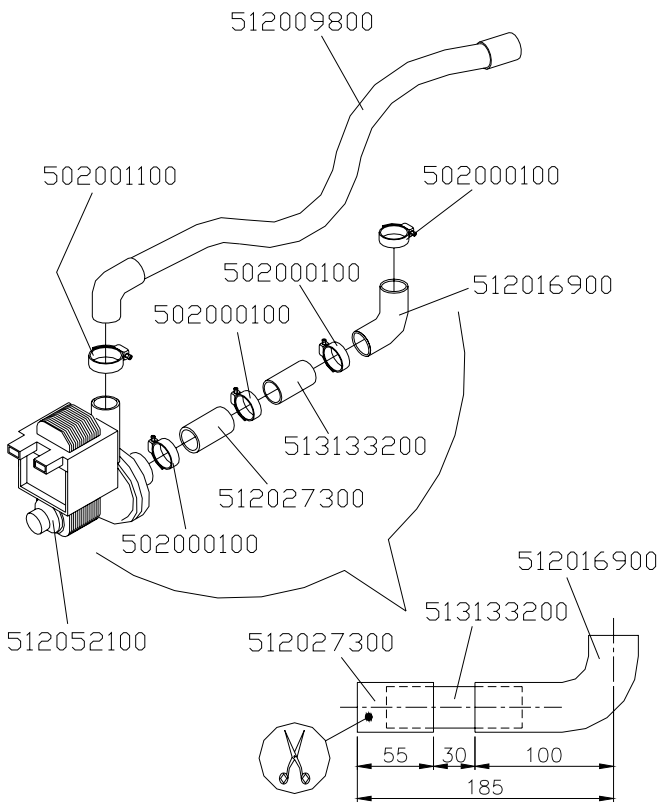


MB 920E

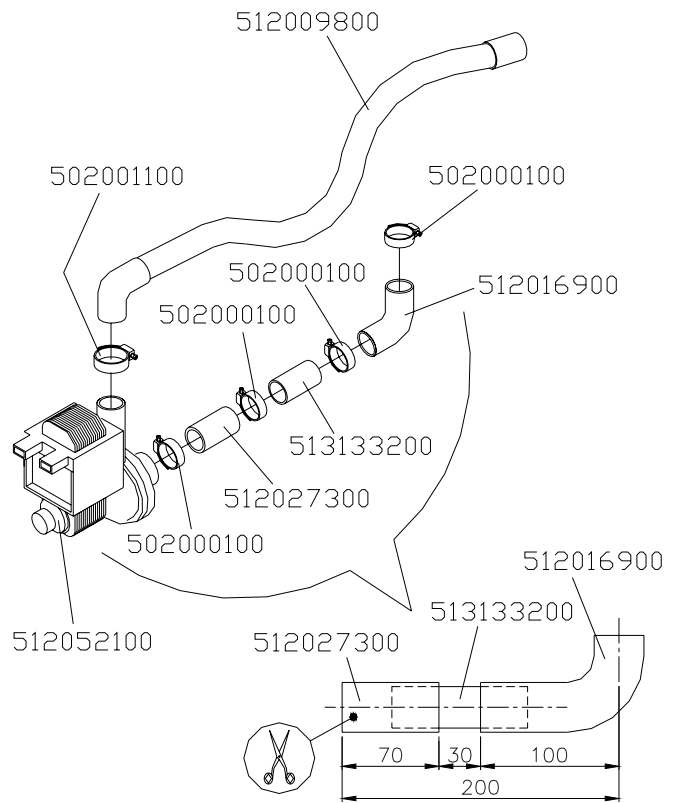

MS 451

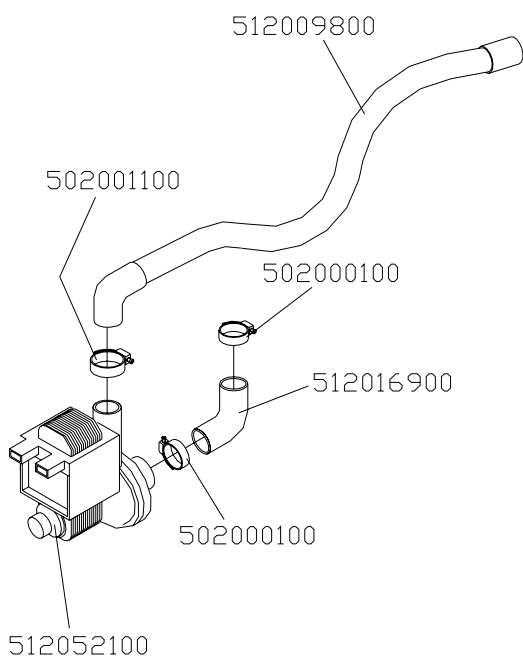

MS 900E

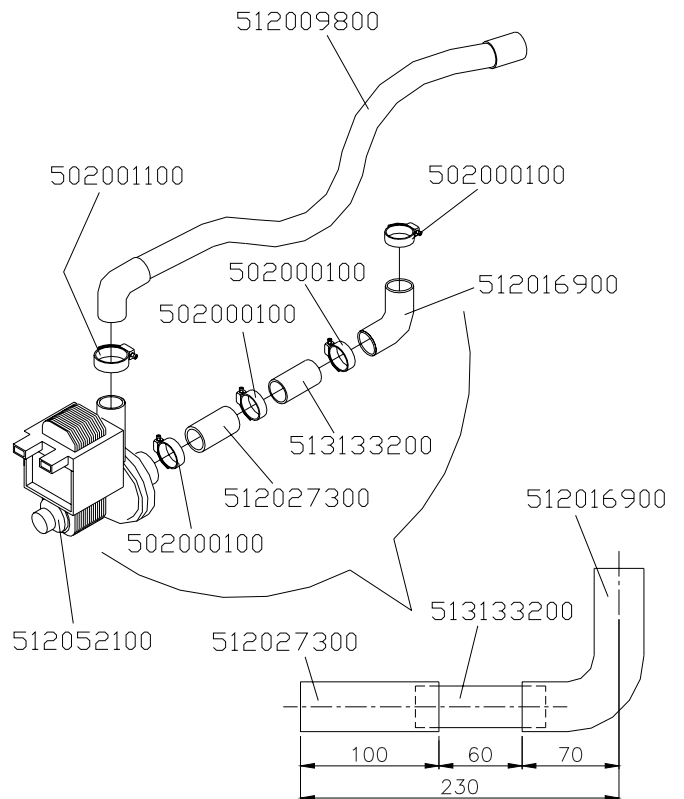



Unit 7, Church Park, Lowfield Heath, Crawley, West Sussex RH11 0PW
Sales: 01293 571199 ▪ Fax: 01293 571133
Email: sales@mpswholesale.co.uk ▪ www.mpswholesale.co.uk